

5-582



5-582AQ



5-530/3 – 5-30/3/AQ



5-530/4 – 5-530/4/AQ



Materia prima: Ottone Funzionamento: Elettrico

Si è elaborato il seguente manuale d'uso allo scopo di fornire le informazioni appropriate per l'installazione e le precauzioni da adottare da parte dell'installatore e dell'utilizzatore. **Il costruttore declina ogni responsabilità in caso di utilizzo dell'apparecchio al di fuori delle istruzioni fornite.**

Il cavo d'alimentazione e' collegato all'apparecchio con un collegamento di tipo z, quindi non puo' in alcun modo e per nessun motivo essere sostituito in caso di danneggiamento. Un'operazione di questo tipo renderebbe l'apparecchio pericoloso e farebbe decadere ogni responsabilita' da parte del costruttore.

ATTENZIONE: Questo apparecchio può essere utilizzato solo per supporto di asciugamani o simili. L'apparecchio nel suo normale utilizzo non deve essere caricato con un peso superiore a **5Kg**

Utilizzare solo le viti e i tasselli in dotazione o sostituirli con altre di uguali o maggiori caratteristiche di tenuta meccanica

GRADO DI PROTEZIONE: Apparecchio protetto contro gli spruzzi.

**IMPORTANTE:
IL COLLEGAMENTO ELETTRICO TRA
L'APPARECCHIO E LA RETE DEVE ESSERE
ESEGUITO DA PERSONALE QUALIFICATO E
CON LA RETE ELETTRICA DISATTIVATA**

CONTENUTO DELLA CONFEZIONE : (vedi immagine 1)

- (1) Chiave a brugola esagono 3
- (4) Grani per fissaggio supporto a muro M6X6
- (3) Supporti a muro

REV.00

Verifica AQU

Approvazione UTE

- (3) Viti con tasselli per fissaggio a muro
- (2) Prolunghe a muro
- (1) Boccola per Box
- (1) Tassello e vite per boccola per box

INSTALLAZIONE: (vedi disegno 2)

Rimuovere lo scaldasalviette e i suoi componenti dall'imballo

Per il montaggio appoggiare l'articolo al muro, dopo aver ruotato verso il lato desiderato (DX o SX) la scatola con interruttore, facendola coincidere con l'uscita dalla parete dei cavi di alimentazione della rete; eseguire il collegamento con le connessioni che escono dalla scatola interruttore.

Segnare la posizione dei supporti a muro ed eseguire 4 fori con una punta Ø 8 nel muro in corrispondenza degli attacchi a muro inferiori e superiori dello scaldasalviette ed inserirvi i tasselli

Assicurarsi che il cappuccio sia inserito nell'attacco a muro.

Fissare al muro i 3 supporti tramite le relative viti.

Fissare i due attacchi a muro opposti alla scatola interruttore. Ruotare lo scaldasalviette e avvicinarlo al muro per collegare i fili elettrici che escono dal muro con le connessioni che escono dalla scatola interruttore e per fissare gli altri due attacchi a muro.

Tramite la chiave a brugola presente nella confezione, serrare il grano posto inferiormente ad ogni attacco a muro in modo che lo scaldasalviette risulti parallelo alla parete

Solo dopo aver eseguito questa operazioni potrete riattivare il collegamento alla rete elettrica e verificare il corretto funzionamento della scaldasalviette.

La ditta declina ogni responsabilità nel caso di montaggio non corretto.

ATTENZIONE:

Qualora ci sia una fuoriuscita di liquido antigelo dagli scaldasalviette assicurarsi di evitare il contatto con gli occhi, evitare inalazione, evitare ingestione e contatto con la pelle.

Raw material : Brass Operation: Electrical

The following manual has been elaborated in order to supply all the useful information for a correct installation together with the precautions to adopt both from installer and users. **Manufacturer declines every responsibility in case of different uses from these instructions.**

The heated towel rails is connected to the mains with a z type connection, and consequently it cannot be substituted in any case of damage. Such an action would make the item dangerous and free the producer from every responsibility.

ATTENTION :This item can be only used as holder for towels and similar garments.

This item, in normal use, cannot be loaded with more than **5 Kg.** weight.

Please, only use provided screws and dowels or replace them with other ones equivalent or greater in mechanical characteristics.

PROTECTION DEGREE: Squirts resistant.

**IMPORTANT:
THE ELECTRICAL CONNECTION BETWEEN
ITEM AND MAINS MUST BE EXECUTED BY
QUALIFIED STAFF AND AFTER TURNING OFF
ELECTRICITY AT THE MAIN PANEL.**

PACKING CONTENTS : (see image 1)

- (1) Allen key
- (4) Screw for upper brackets M6X6
- (3) Screw with dowel
- (3) Brackets holder
- (2) Wall extension
- (1) Box bush
- (1) Dowel and screw for box bush

INSTALLATION: (see design 2)

Take out the heated towel rail and its components from the package.

To mount the heated towel rails, lean it against the wall, then rotate the switch box to the desired side (Left or Right) and let it coincide with the mains output from the wall; Execute the electrical connection to the cable exiting from the item. Consequently rotate the upper and bottom wall brackets. Mark their position and make four holes with a Ø 8 drill in correspondence of the upper and bottom wall brackets and insert the provided dowels.

Fix the four wall bracket to the wall by the proper screws
Fix the two wall brackets at the opposite side of the wall switch box. Rotate the item and approach it to the wall to connect the electrical whirls coming out from the wall to the cables exiting from the switch box and then fix the other two wall brackets. Only after finishing this action, you can turn the power on and verify the heated towel rails works correctly.

Using the provided allen key now, tight the little screw present under every wall bracket, so that the heated towel rail looks parallel to the wall.

Our Company refuses any responsibility in the case the assembly doesn't respect the above mentioned instruction.



WARNING:

Whether a leakage of antifreeze liquid occurs from our electrical towel heaters, take care not to permit any contact with eyes and skin and avoid inhalation or ingestion

1)



2)

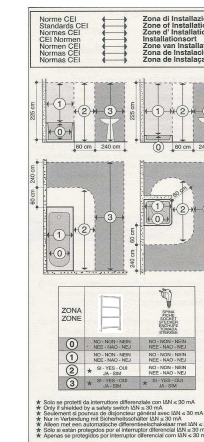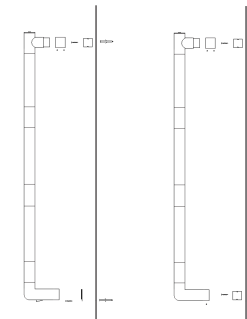

ATTENZIONE: NON smaltire lo scaldasalviette come normale rifiuto urbano, ma effettuare una raccolta separata e uno smaltimento in apposito centro attrezzato.
WARNING: DO NOT get rid of this item as urban waste, but swallow it separately or by properly equipped institutes.